

Clampo Pro


- FI** Asennusohje
- SV** Monteringsanvisning
- EN** Mounting instructions
- DE** Montageanleitung

Asennuksissa on noudatettava voimassa olevia kansallisia sähköalan asennusmääräyksiä.

Installationer skall utföras enligt ikraftvarande nationella föreskrifter för elinstallationer.

Installations must be carried out in accordance with the applicable national regulations for electrical installations.

Die Installationen müssen in Übereinstimmung mit den geltenden nationalen Vorschriften für elektrische Installationen durchgeführt werden.

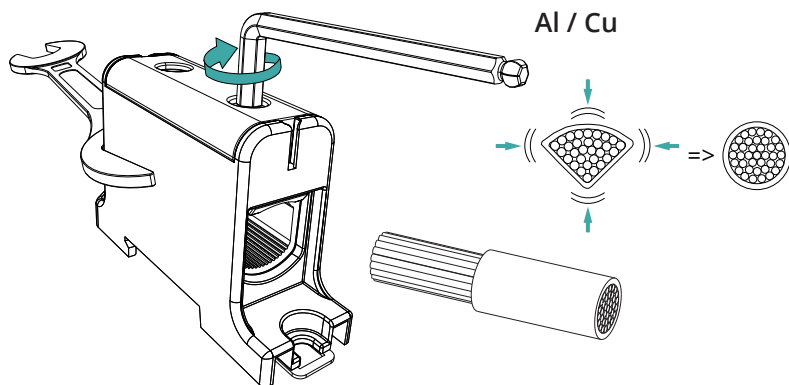


Poista oksidikerros

Avlägsna oxidskiktet

Remove the oxide layer

Entfernen Sie die Oxidschicht

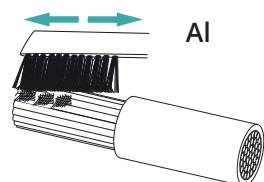


Levitä liitosrasvaa, esim. SR1




Applicera skyddsfett, t.ex. SR1

Apply joint compound, e.g SR1

Auftragen von Schutzfett, z.B. SR1

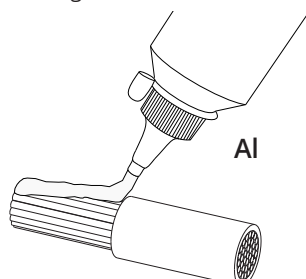

KytKentä / Anslutning / Connection / Verbindung

Clampo Pro	Cu mm ²	Al mm ²				
KE60... KE65...	1.5 - 16	1.5 - 16	15	4	19	6
KE61... KE66... KE161... KE91...	2.5 - 50	6 - 50	23	5	20	4 (2.5 - 4 mm ²) 12 (6 - 50 mm ²)
KE62... KE67... KE162... KE92...	16 - 95	16 - 95	27	5	25	20
KE63... KE68... KE163...	35 - 150	35 - 150	30	8	34	20 (35 - 95 mm ²) 30 (120 - 150 mm ²)
KE93...	25 - 150	25 - 150	30	8	34	20 (25 - 95 mm ²) 30 (120 - 150 mm ²)
KE64... KE69...	35 - 240	35 - 240	43	8	38	12 (35 - 70 mm ²) 45 (95 - 240 mm ²)
KE70...	50 - 300	50 - 300	40	8	38	35 (50 - 150 mm ²) 45 (185 - 300 mm ²)

KE60, KE65	1.5 – 6 mm ²
KE61, KE66, KE91	2.5 – 16 mm ²
KE62, KE67, KE92	16 – 35 mm ²
KE63, KE68	35 – 70 mm ²
KE93	25 – 70 mm ²
KE64, KE69	35 – 120 mm ²
KE70	50 – 150 mm ²

